

Towsure

The TowBar People

TOWING BRACKET FITTING INSTRUCTIONS

Part No: **VW988**

Model: POLO HATCHBACK 94-

Components

A	1	CENTRE STRUT
B	1	FOUR HOLE PLATE


Bolt Pack

C	2	16 x 50 BOLTS
D	5	12 x 35 BOLTS
E	1	12mm WASHER

Fitting Procedure

1. REMOVE BOOT FLOOR COVERING AND SPARE WHEEL.
2. POSITION FOUR HOLE PLATE (B) CENTRALLY AGAINST REAR PANEL WITH BOTTOM EDGE RESTING ON BOOT FLOOR MAKING SURE THAT THE FOUR HOLES ARE AT THE TOP OF THE PLATE (SEE DIAGRAM). MARK OFF AND DRILL THE FOUR HOLES. FIT CENTRE STRUT TO THE OUTSIDE OF CAR USING FOUR BOLTS (D).
3. MARK OFF AND DRILL THE FORWARD HOLE IN THE CENTRE STRUT THROUGH THE BOOT FLOOR AND SECURE USING BOLT (D) WITH WASHER (E) INSIDE BOOT.
4. TIGHTEN ALL BOLTS.

View of Bracket

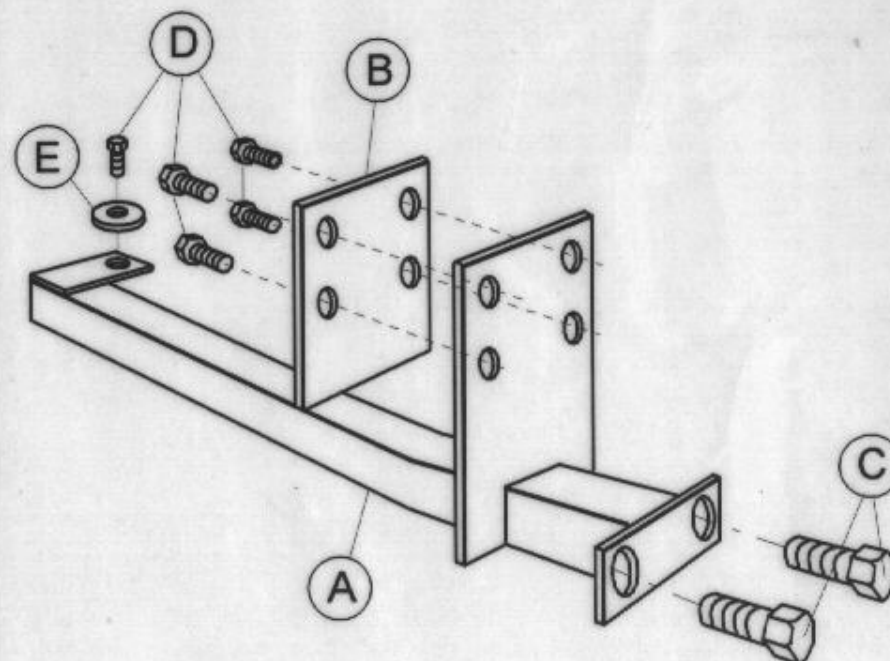

*Designed and Manufactured to
British and International
Standards BS114 and ISO 3853*

© JUNE 95